

Steering Wheel Interface(SWI) Operation

Enter Set up> General>SWI Settings, it will show below screen

[ANALOG TYPE]

Description

- ① Shows the current voltage of a Steering wheel key
- ② Shows the number of keys that are mapped
- ③ Steering wheel functions
- ④ Reset
- ⑤ Clear a previous setting
- ⑥ Confirm setting




Steering Wheel learning Process

- ① Press a steering wheel function (#3) to start the programming procedure, A Sky Blue color shows up in the top right corner of that tab.
- ② Press the button on the steering wheel that is the same as that function, the tab will show red when programmed.
- ③ Press OK (#6) to complete then repeat the above number 1 and 2 for the other functions.


*. NOTE: Procedure 1-3 will program one key at a time, be sure to map only one key at a time.

SWI Connecting Wires

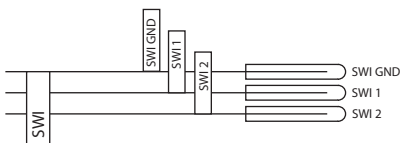

[DIGITAL TYPE]

 For data-bus vehicles, a third party SWI interface will be needed, please refer to the interface installation instructions for button programming. The SWI-IR wire on our unit will connect to the interface module, please use the Kenwood protocol for setup instructions.



APPLICABLE VEHICLES

Make	Connector	SWI1	SWI2	SWI-GND	APPLICABLE VEHICLES
Chevy/Buick/Olds/Pontiac	A	A6	N/A	A7	2004-12 Acura
Ford/Lincoln/Mercury	B	18	N/A	19	2004-09 Buick
	C	14	N/A	RG*	2000-08 Chevrolet 2004-12 Ford*
Honda/Acura	D	7	N/A	6	2003-12 Honda
	E	3	N/A	RG*	2006-13 Hyundai
	F	16	N/A	5	2006-13 Kia
Kia/Hyundai	G	18	N/A	19	2003-12 Lexus
	H	6	N/A	18	2003-11 Lincoln
	I	4	N/A	17	2003-12 Mazda
	J	5	N/A	6	2003-11 Mercury 2005-11 Nissan
Mazda	K	6	N/A	5	2002-04 Oldsmobile 2001-08 Pontiac
Nissan	L	16	6	15	2004-12 Scion
	M	75	74	76	2003-13 Toyota
	N	70	69	71	*2012 Ford F-150
	O	23	22	25	Not compatible
	P	22	21	23	
	Q	13	12	14	
Toyota/Scion/Lexus	R	21	22	23	
	S	7	8	6	

*RG = Ground wire from the radio harness

IMPORTANT

Chevrolet/ Buick/ Olds/ Pontiac		
Ford/ Lincoln/ Mercury		
Honda		
Kia/ Hyundai		
Mazda		
Nissan		
Toyota/ Scion		