

NOTE: There are 2 parts to this firmware update. You will need a formatted USB Thumb Drive to complete the update.

Part 1 - CPU Firmware Update


1. Download the firmware update onto your desktop of your PC or laptop.



2. Unzip the downloaded file and you will see the below folder on your desktop.



3. Open the unzipped folder. Format your USB thumb drive and copy (8202hrom File) the below file to it.

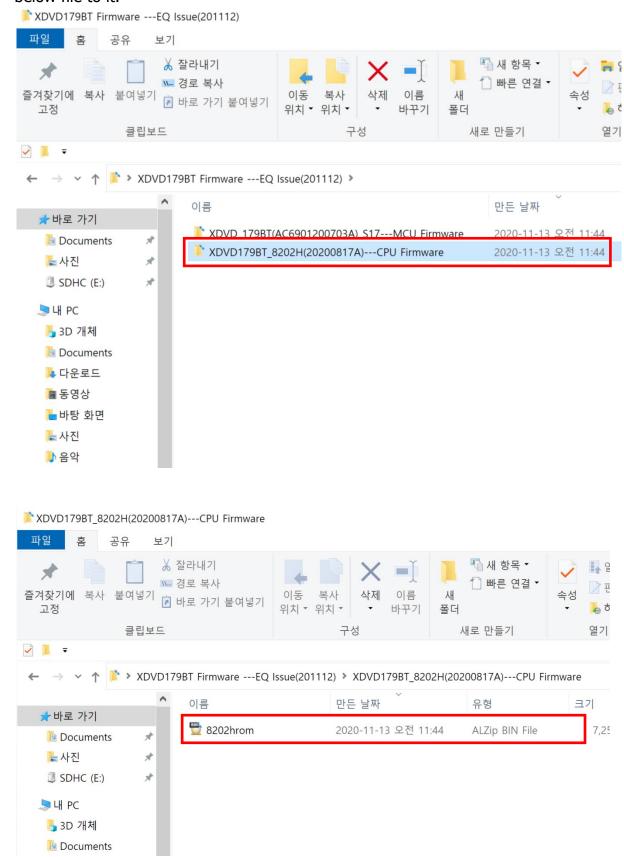

4. Insert the USB thumb drive into the USB input on the front of the radio.




5. Once inserted the below screen will be displayed. Press the $\mathbf{Green} \ \mathbf{\sqrt{icon}}$ to begin.



6. Once the update as started successfully, you will see the Green color bar to show the

status of the update.

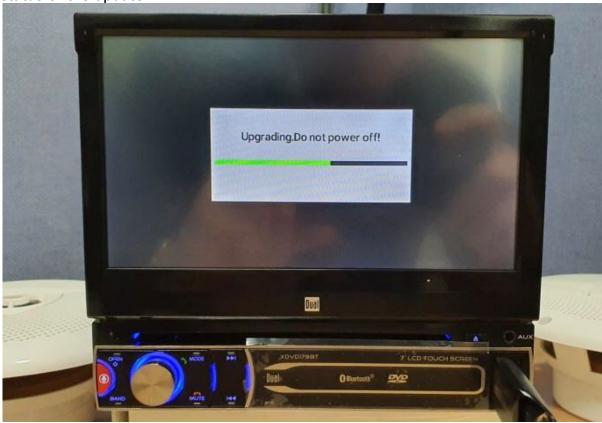

7. 7. When the update is completed, the TFT LCD Panel is closed as shown below. Remove the USB thumb drive and turn the vehicle off and on again. This completes the CPU update.



Part 2 - MCU Firmware Update


1. Download the firmware update onto your desktop of your PC or laptop.




2. Unzip the downloaded file and you will see the below folder on your desktop.



3. Open the unzipped folder. Format your USB thumb drive and copy the below file to it.

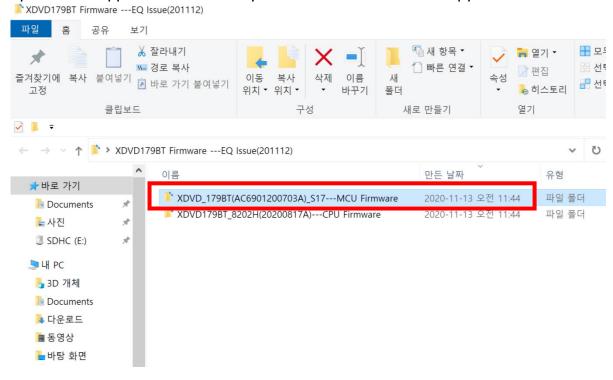

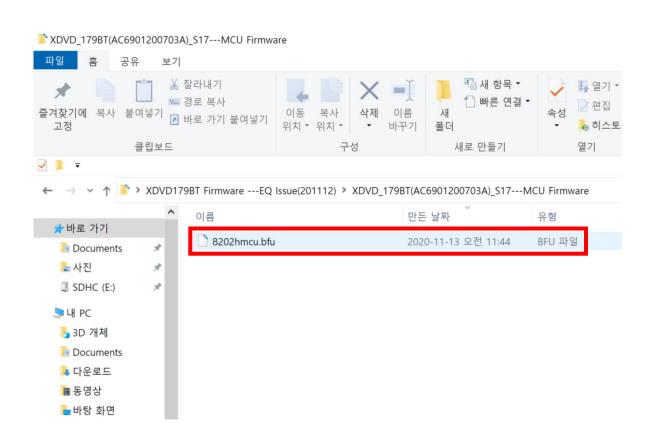

4. Insert the thumb drive into the USB input on the front of the radio.



5. Once inserted the below screen will be displayed. Press the **Green** $\sqrt{\text{icon}}$ to begin.



6. Once the update as started successfully, you will see the Green color bar to show the

status of the update.



7. Once the update is complete you will see the below screen. Remove the USB thumb drive and turn your vehicle off and then back on. This will complete the MCU update.



Checking the Firmware Version

1. Press the Setting Icon on the Main Menu screen or Radio Mode screen.



2. Touch the arrow to the right of the Version text in the Settings menu as shown below.



3. If your receiver displays the below updated firmware versions, than your receiver is

now up to date.

