

DXRM58BT **Quick Start Guide**

Digital Media Receiver with Bluetooth®

.

General Operation

hold 山 /MODE button to turn unit off

Adjust volume using volume knob



Power On/Off

Faceplate Removal

Changing Modes

Auxiliary Inputs

Volume

Mute

Reset

Display

To download the complete, model-specific manual, please visit www.dualav.com/support/manuals.php or call 1-866-382-5476, 9AM-5PM EST (Monday-Friday).

Press the U /MODE button to turn the unit on. Press and

Press প্রথ্ to silence the audio. Press প্রথ্ again to resume listening at the previously selected volume.

Press RELEASE and pull away from the right side to

remove. To re-install, insert left side of faceplate first then push right side to secure.

Press MODE to select between Radio, USB,

AUX, Bluetooth. Modes of operation are shown in the display.

Insert a 3.5mm cable in the units front AUX port

Installation

Before You Start

Consult a qualified technician for instructions. Dual always recommends professional installation.

Disconnect negative battery terminal.
Remove trim ring from unit (if installed).

Note: Most vehicles require an installation kit, wiring harness and/or antenna adapter (all sold separately) to properly install the head unit in the vehicle.

Installation Process

- Carefully remove the existing head unit.
 Connect wiring harness. Consult a qualified technician if you are unsure. 3. Mount the head unit using the mounting sleeve or ISO brackets (depending on vour vehicle's dashboard).
- 4. Connect wiring harness and antenna. Test the head unit for correct operation. 5. Slide into mounting sleeve to secure, or mount the ISO brackets to the vehicle.
- 6. Snap trim ring into place.

Wiring Connections The chart below the connection for each wire in the wiring harness.

Color	Connection	
Red	12V Ignition / Accessory	
Yellow	12V Battery / Memory	Tip: When a suitable ground wire is
Black	Ground	not present in the vehicle wiring
Blue	Power Antenna / Amp Turn-on	harness, connect the black ground
White	Left Front (+)	wire to the vehicle chassis.
White/Black	Left Front (-)	
Grey	Right Front (+)	Fuse:
Grey/Black	Right Front (-)	When replacing the fuse, make
Green	Left Rear (+)	sure new fuse is the correct type
Green/Black	Left Rear (-)	and amperage. Using an incorrect fuse could damage the radio.
Violet	Right Rear (+)	
Violet/Black	Right Rear (-)	

AM/FM Tuner Operation

Seek Tuning Press TUNE I or TUNE I to seek to previous or next strong station Manual Tuning Press and hold the TUNE I or TUNE I to enter manual tuning mode. Then press TUNE 🖊 or TUNE 🍽 momentarily to move radio frequency down or up one step at a time. Press and hold TUNE I or TUNE I to advance quickly Press BAND to select between FM1, FM2, FM3, AM1 Band and AM2 bands. Up to six presets can be programmed for each band, enabling up to 18 FM stations and 12 AM stations to be stored in memory. Up to 18 FM and 12 AM stations can be stored. To store Storing Presets a station, select the desired band and station. Press and hold the desired preset button (1-6) for more than two seconds. When stored, the preset number will appear in the display Preset stations can be recalled any time by pressing the corresponding preset button. Press and hold AS for more than 2 seconds to store Auto store 18 FM stations and 12 AM stations automatically Press the AS/PS (on remote control) to recall each preset Preset Scan station that stored in the memories in each band

.

To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php.

Limited One-Year Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Dual Electronics Corp. warrants this product to the original purchaser to be free from defects in material and workmanship for a period of one year from the date of the original purchase. (Note that select marine products carry a 2-year warranty. Please visit www.dualav.com for details.) Dual Electronics Corp. agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period

Who is covered? This warranty is extended to the original retail purchaser for products purchased and used in the U.S.A.

in this product. The following are not covered: installation/removal costs, damage installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return of the product

What to do?

- 1. Before you call for service, check the troubleshooting guide in your owner's
- Before you can for service, check the hobitesholding guide in your owner is a manual. A slight adjustment of any custom controls may save you a service call.
 If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation
- center 3 Please describe your problem in writing and include your name, a return UPS
- your shipment.
- Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or . quential damages

Installation

Mounting the Head Unit: Typical DIN mounting

Step 1:

uble DIN

Double DIN

Insert the mounting sleeve into the installation kit or dashboard. *Mounting Sleeve is Not included.

Mounting the Head Unit: ISO mounting

brackets or the brackets

installation kit, mount the brackets to the sides of the head unit with the screws supplied with the

Using the existing

supplied with the

 
head unit.

 
Plavi

 
Fast


F

Step 2: Bend multiple mounting tabs around the mounting sleeve until the mounting sleeve is secure







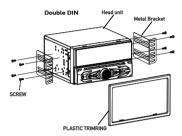

USB Operation

	•	
ing MP3 Files	To play MP3 files, insert a USB device containing MP3 files.	
Track Select	Press TUNE In to skip to the beginning of the next song.	
Forward and Reverse	Press and hold TUNE I or TUNE I to fast forward or reverse a track.	
Pause	Press ►/ III to temporarily stop playback. Press ►/ III again to resume playback.	
Folder Access	Folder can be found by pressing Folder Up or Folder Down About 1 second after the folder name is displayed, the first file under the selected folder will be displayed and playbac	
Repeat	Press RPT to toggle between RPT ALL,RPT FLR and RPT ONE. • RPT ALL - Plays all tracks on USB device. • RPT FLR - Continuously repeats all files in current folder. • RPT ONE - Continuously repeats selected track.	
Random	Press RDM to play tracks in random order, press again to cancel the RDM function. • RDM ON - Plays all tracks in random order. • RDM OFF - Cancels the RDM function.	
Intro	Press INT to plays first 10 seconds of each track, press again to cancel the INT function. • INT ON - Plays the first 10 seconds of each track. • INT OFF - Cancels the INT function.	

.

To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures. measures:

- Reorient or relocate the receiving antenna e separation e equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio technician for help.



©2018 Dual Electronics Corp. All rights reserved word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc Other trademarks and trade names are those of their respective owners NSC0318-V01

To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php

.

Press the **RESET** button to reset the unit back to the factory settings if abnormal operation occurs. The reset button is located on the front panel. **Recalling Presets** With the unit on, press and hold **DISP** to display clock time. Press and hold **DISP** to toggle display between various displayed information.

Setting the Clock Press and hold volume knob to select clock setting mode Rotate the volume knob to right to adjust hours and rotate volume knob to left to adjust the minutes. Audio / Menu Press volume knob momentarily to select between the

audio functions. Press and hold volume knob for more than two seconds to select between the menu functions. Rotate the volume knob left/right to adjust or activate the desired function/audio

.

To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php.

Bluetooth[®] Operation

Preparation	Before using a Bluetooth device, it must be paired and connected. Ensure that Bluetooth is activated on your device before beginning the pairing process.
Pairing a New Device	The head unit broadcasts the pairing signal constantly when no devices are connected. Complete the pairing sequence from your Bluetooth device. Refer to the owner's manual for your device for more details.
	The device name is "DXRM58BT" The Bluetooth passcode is "1234"
	Note : If passcode "1234" does not pair your device to the receiver, use passcode "0000".
	Note: The head unit can be in any mode of operation when pairing is performed.
Streaming Audio Troubleshooting	The head unit supports A2DP wireless streaming audio from a Bluetooth mobile device directly to your head unit. The following functions can be used to control the music:
	 Press b to skip to the next available audio track.
	 Press is to skip to the previous audio track.
	 Press ▶/ II to toggle between play and pause during playback.

What is covered? This warranty covers all defects in material and workmanship

- with a copy of the original receipt from the retailer to an authorized service
- shipping address (P.O. Box not acceptable), and a daytime phone number with
- 4. For more information and for the location of the nearest authorized service center please contact us toll-free at 1-866-382-5476 or by email at cs@duala

obligation, liability, right, claim or remedy in contract or tort, whether or not arising